


# The Art of Floor Care™

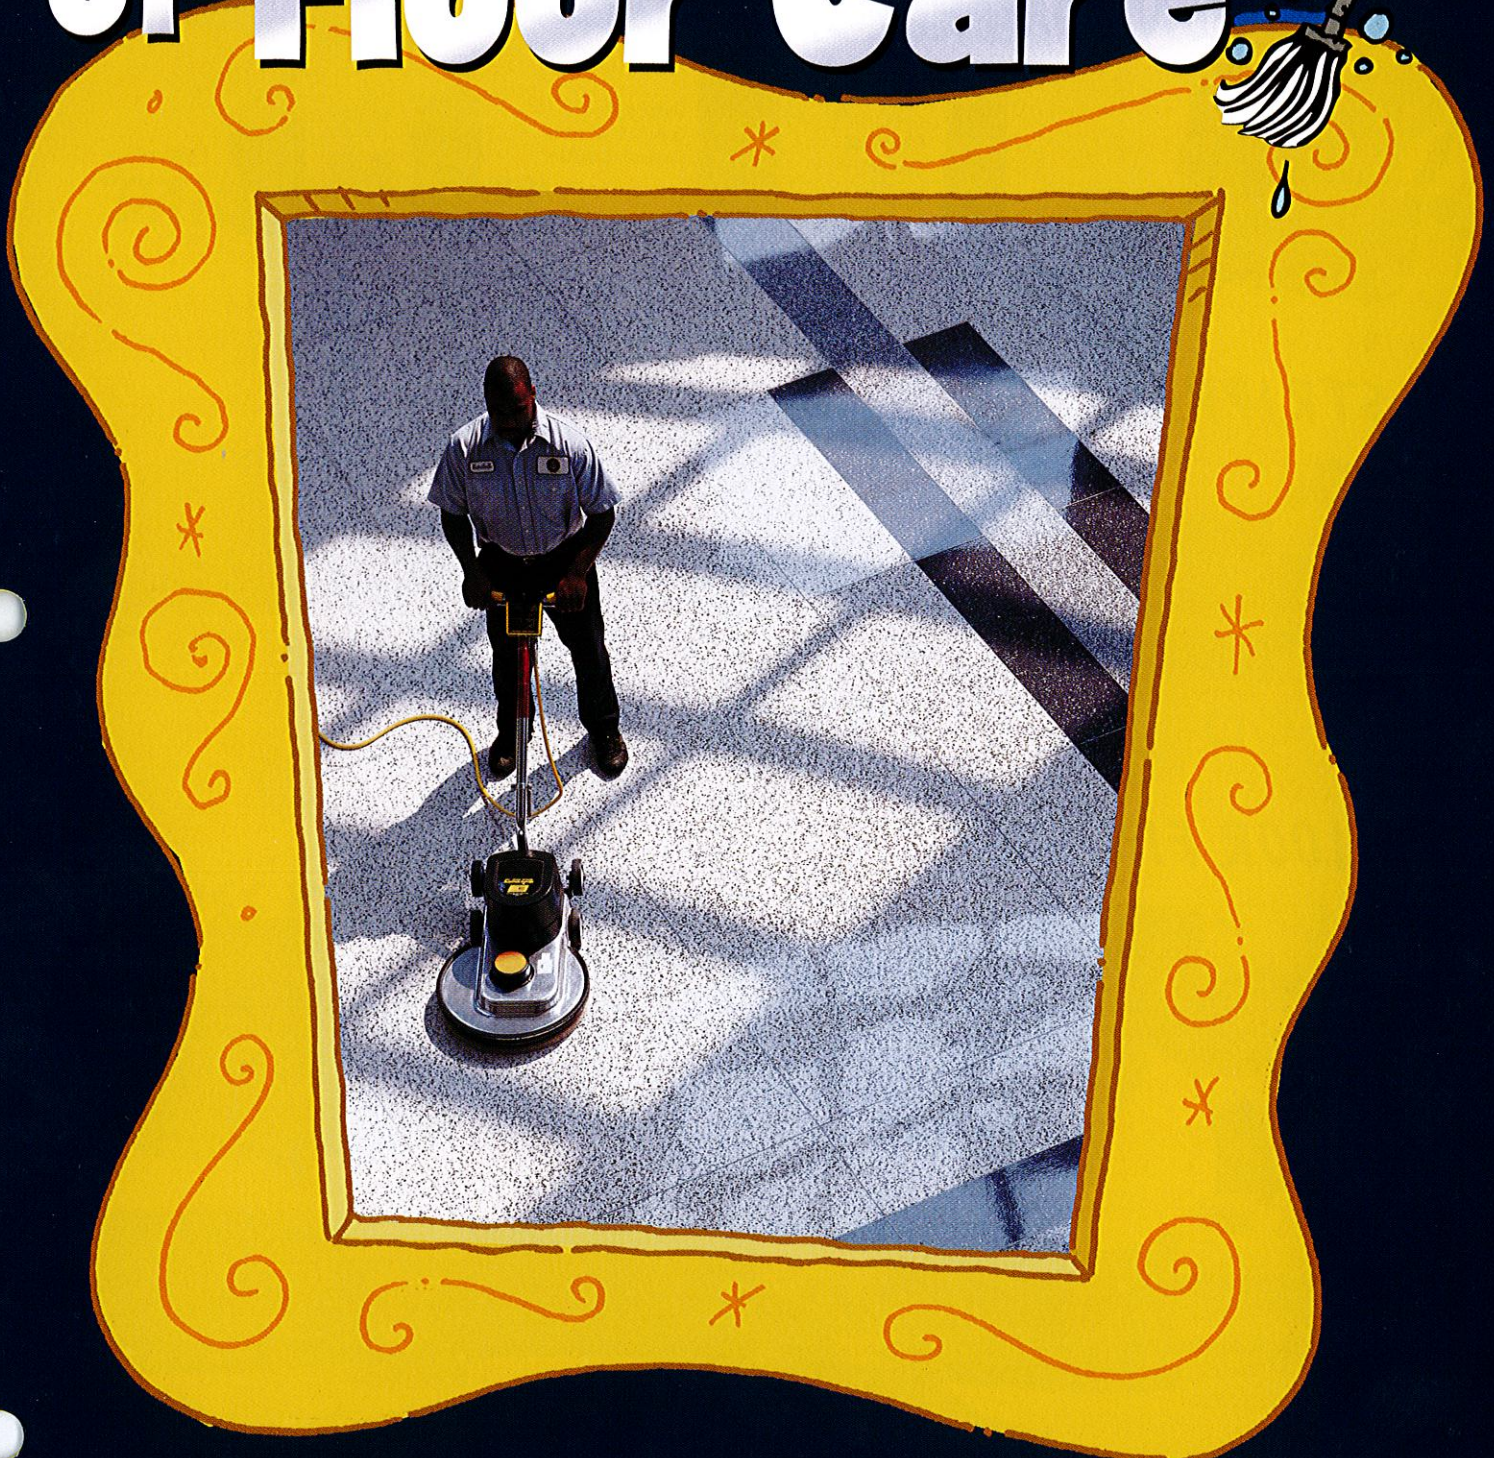

**TRAINING GUIDE**

**BUTCHERS®**

# Butcher's Product Gallery

## DILUTION CONTROL SYSTEMS



Command Center®  
4-Button



Command Center®  
Satellite



Outpost™  
Compact, Versatile  
Dispensing System



Pipeline™  
Squeeze-to-Pour  
Containers

## STRIPPERS



Crowbar™  
Ultra-Strength,  
Non-Ammoniated  
Stripper



Low Profile™  
Ultra Low-Odor  
Stripper



Full Impact™  
Dilution Control,  
No-Rinse Stripper

25 25



Cutting Edge®  
High-Performance  
Stripper



Jackhammer®  
Aerosol Baseboard  
Stripper

## FLOOR FINISHES



Iron Stone®  
Acrylic Seal



High Noon®  
Ultra-Durable,  
UHS Finish



Amplify™  
High Solids  
Durable Finish



Clear Reflection™  
High-Performance,  
UHS Finish



Above®  
Ultra-Durable,  
Infrequent Maintenance  
Finish



Mainstay®  
High-Performance,  
Infrequent Maintenance  
Finish

2

1 Numbered block denotes product available in Command Center.

1 Numbered circle denotes product available in Outpost.



**There is an art**  
 to producing great-looking floors. Butcher's  
 Art of Floor Care Training Guide shows proven  
 cleaning methods for the essential floor care  
 tasks and helps you avoid the most common  
 mistakes. With this tool and Butcher's superior  
 floor care products, you will be on your way to  
 creating your own floor care "work of art."



## DAILY CLEANERS


 Hold®  
 Dust Mop/  
 Dust Cloth  
 Treatment


 Sundance®  
 Neutral Floor  
 Cleaner



 Raindance™  
 Low Foam Neutral  
 Floor Cleaner



 Morning Mist™  
 Full Fragrance  
 Neutral Disinfectant


 Quest 256®  
 Fragrance-Free  
 Neutral Disinfectant


 Suntrack®  
 Restorative  
 Cleaner

## GLOSS RESTORERS


 Over Drive®  
 Spray Buff


 Speedtrack®  
 Clean-and-Burnish  
 Restorer

## SCRUB-AND-RECOAT CLEANERS


 Hot Springs®  
 General Purpose/  
 Scrub-and-Recoat  
 Cleaner


 Burn Out™  
 Spray Floor Cleaner  
 for Scrub-and-Recoat


# Stripping



## EQUIPMENT




## PROCEDURES

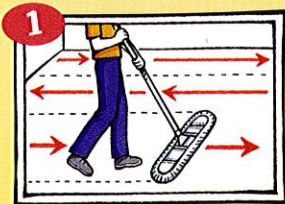

Dust mop.



Tape off doorways and edges.

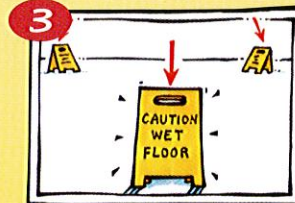


Put out wet floor edges.




Wear protective equipment.



Mix stripper properly using cool water.

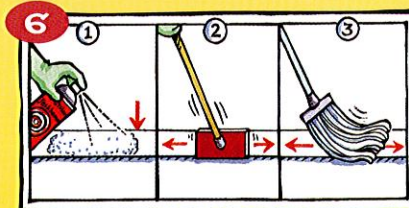

Spray baseboards and edges with Jackhammer.® Scrub with a white pad and rinse.

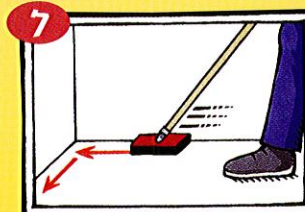

Scrape finish from edges, if needed.




Flood mop on stripper. Let dwell 5-10 minutes.

## GOOFS and




**IF:** You cover too big of an area...

**THEN:** The stripper will dry onto the floor.

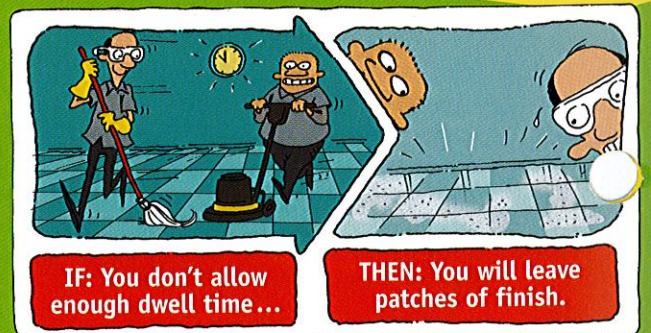

**IF:** You don't allow enough dwell time...


**THEN:** You will leave patches of finish.

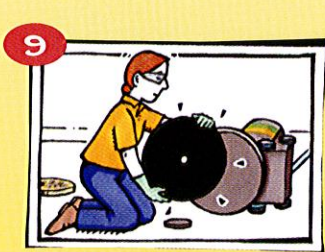

Use a clean black pad.




Walk where you scrub. Flip or change pad when clogged.

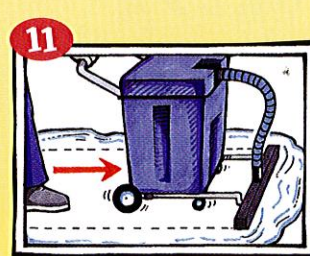


Wet vac pickup.



Damp mop rinse with clean water and a clean mop.

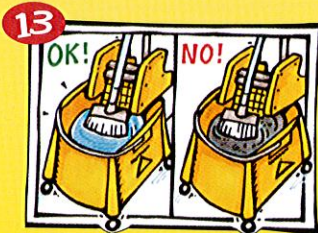

Change mop water when dirty.

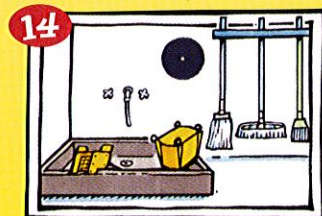

Properly clean and store equipment.




Apply finish when floor is dry.

# CONSEQUENCES™



IF: You use a clogged pad...

THEN: You will leave patches of finish.

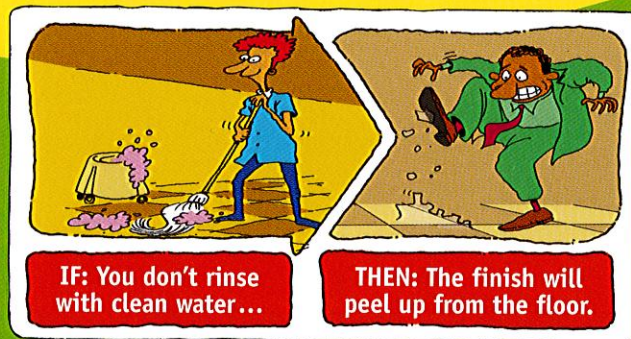


IF: You don't rinse with clean water...

THEN: The finish will peel up from the floor.


# Finishing




## EQUIPMENT

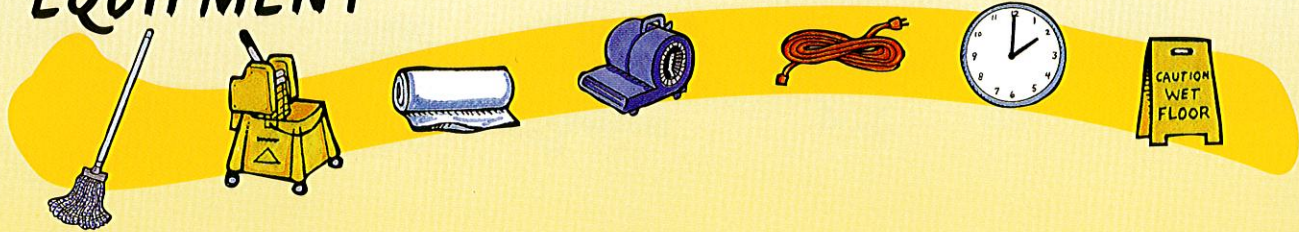


## PROCEDURES

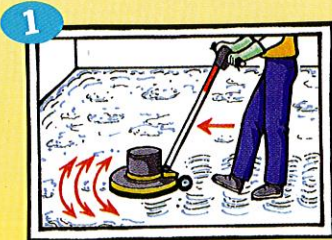

Follow proper stripping or scrubbing procedures first.

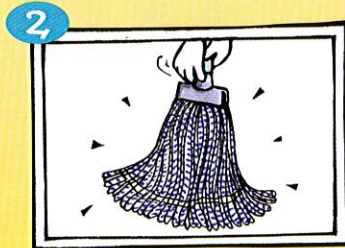

Use a clean finish mop.

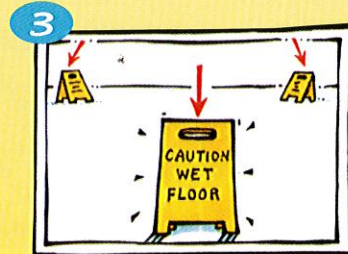


Make sure wet floor signs are out.



Line the bucket. Pour in the finish.



Place mop in finish. Wring out the bottom half of mop.

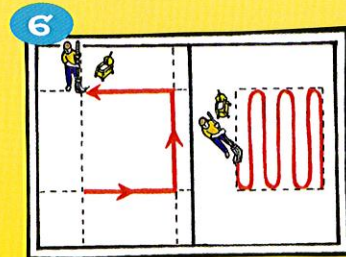

Finish area in sections.



## GOOFS and

**IF:** You use a dirty mop ...


**THEN:** The floor will be streaky.

**IF:** You pour finish into a dirty bucket ...

**THEN:** The floor will be dull.

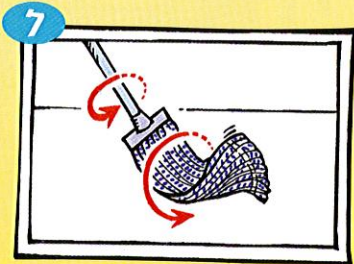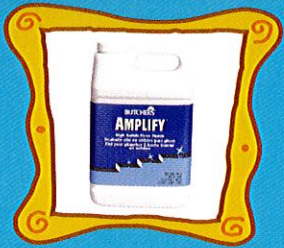


7  
Flip mop to get more finish.

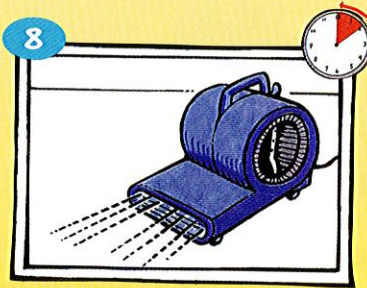

8  
After 10 minutes, place floor fans.




9  
Recoat when floor is dry to the touch.

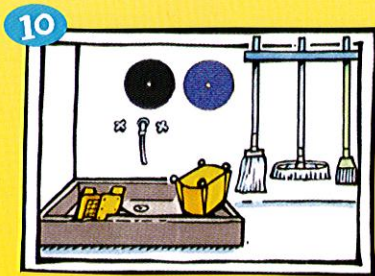

10  
Properly clean and store equipment.

## CONSEQUENCES™

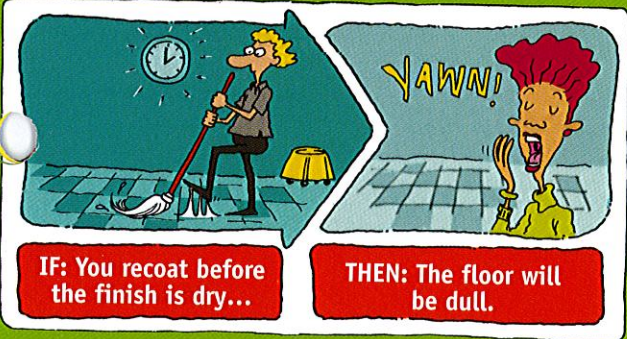

IF: You recoat before the finish is dry...

THEN: The floor will be dull.



IF: You put the floor fan on too soon...

THEN: You will leave ripples in the finish.


# Daily Maintenance




## EQUIPMENT




## PROCEDURES

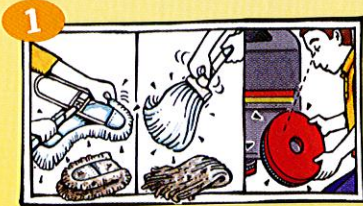


1 Use clean mops and pads.

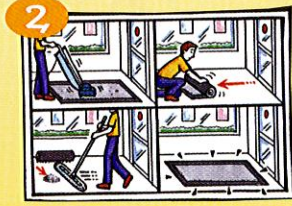


2 Clean walk-off mats.

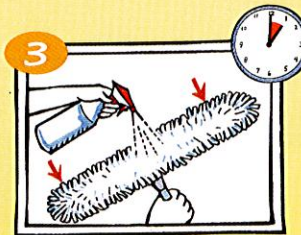

3 Spray mop with treatment one hour before use.

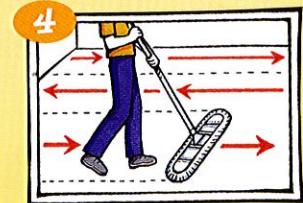


4 Dust mop.

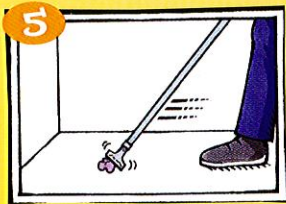


5 Use scraper to remove gum and stickers.



6 Wear protective equipment.

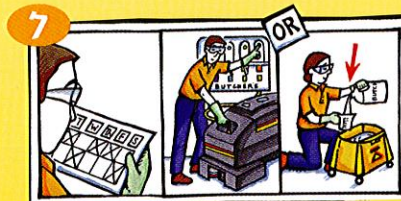

7 Check schedule. Mix cleaning solution properly.

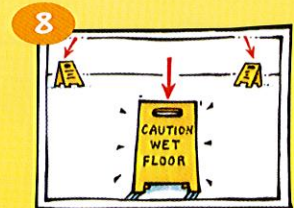

8 Put out wet floor signs.

## GOOFS and


**IF:** You use too much chemical ...

**THEN:** The floor will be sticky.

**IF:** You use a dirty mop or dirty water ...

**THEN:** The floor will be streaky.




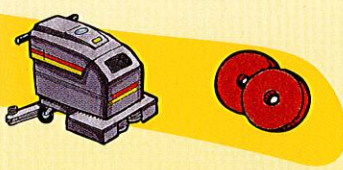


### MOPPING:



Mop area with a figure 8 motion.

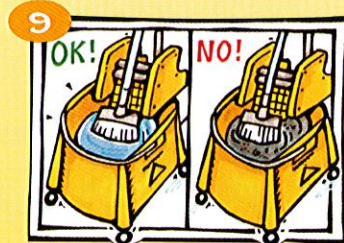


Change mop water when dirty.

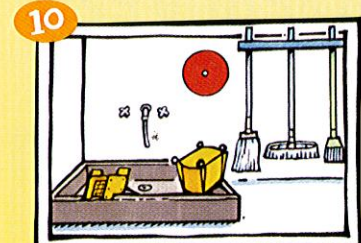


Rinse off equipment when done. Store properly.

OR


### AUTOSCRUBBING:

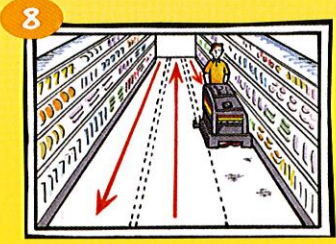

Autoscrub using overlapping passes.

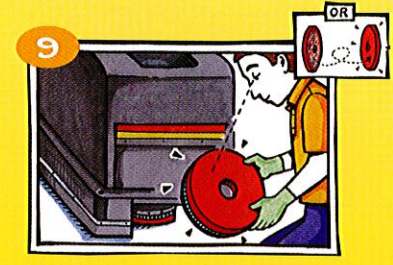

Flip or change pad when dirty.

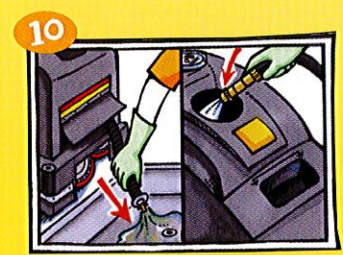

Empty and rinse out both tanks. Store machine properly.

## CONSEQUENCES™

**IF:** You don't clean the walk-off mat ...

**THEN:** Dirt will track back onto the floor.


**IF:** You scrub using a dirty pad ...

**THEN:** You will grind dirt into the floor.


# Spray Buffing




## EQUIPMENT

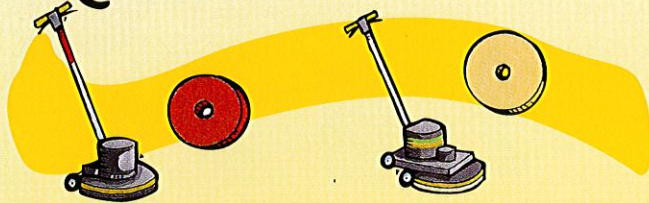

## PROCEDURES

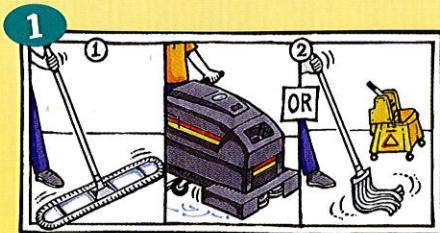


Always clean the floor first.

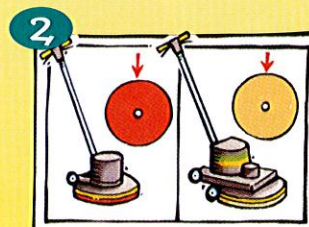


Use proper color pad.  
Make sure pad is clean.




Spray Butcher's  
Over Drive® lightly on  
the floor.

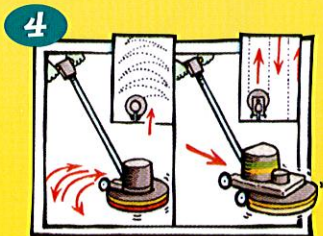


Buff floor to a  
high shine.

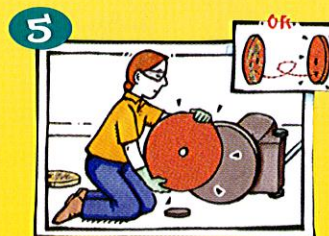


Flip or change the  
pad when dirty.

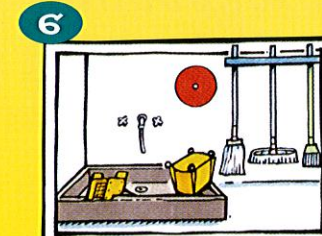

Properly clean and  
store equipment.

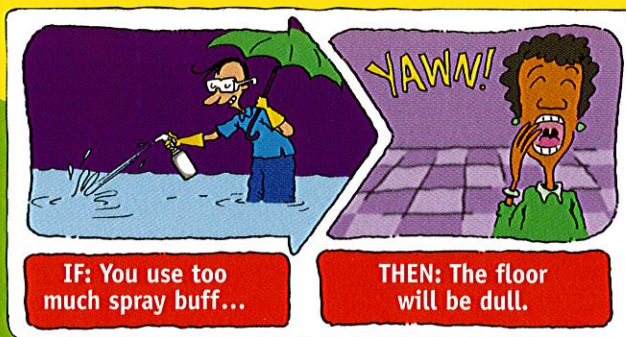


## GOOFS and

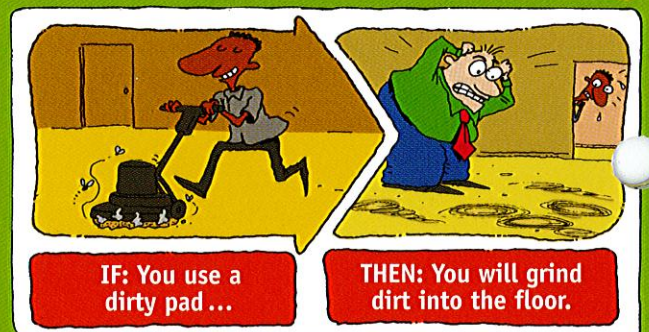


# Burnishing




## EQUIPMENT

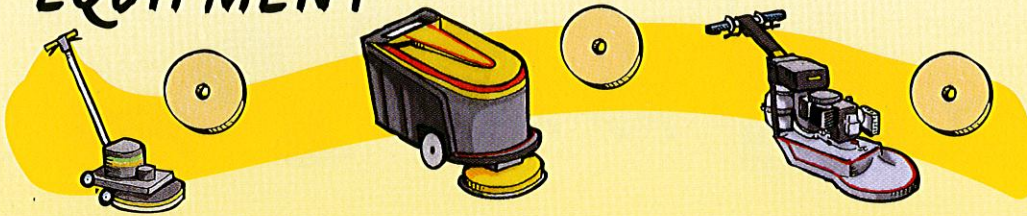


## PROCEDURES

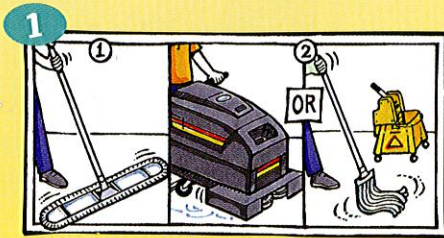


1 Always clean the floor first. Check the schedule for the use of Butcher's Speedtrack®.

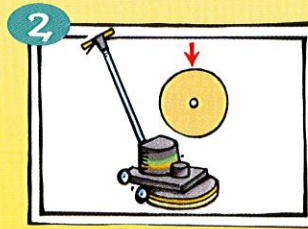


2 Use proper color pad. Make sure pad is clean.

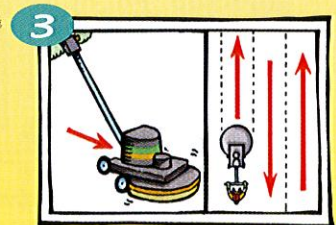

3 Burnish floor to a high shine.

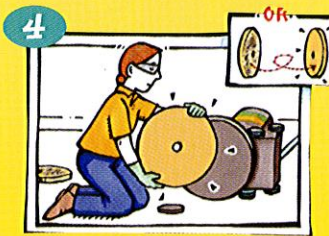

4 Flip or change the pad when dirty.

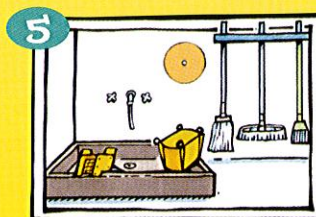


5 Properly clean and store equipment.

## CONSEQUENCES™



IF: You don't clean the floor first...

THEN: You will grind dirt into the floor.

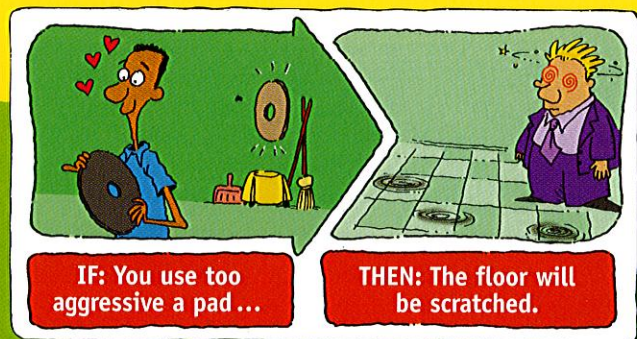

IF: You use too aggressive a pad...


THEN: The floor will be scratched.

# Scrub & Recoat


## EQUIPMENT



## PROCEDURES

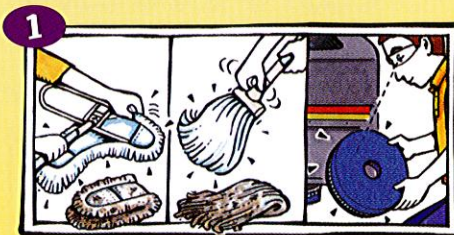

Use clean mops and pads.

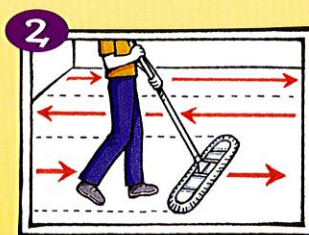


Dust mop.




Wear protective equipment.



Mix cleaning solution properly.

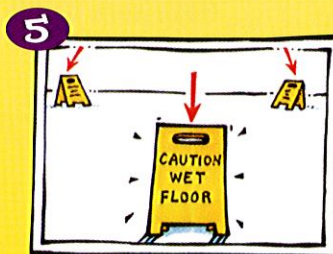


Put out wet floor signs.

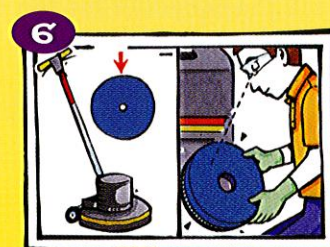


Use proper color pad. Make sure the pad is clean.

12

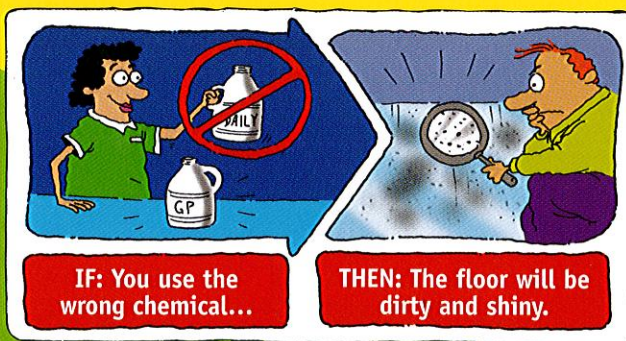

## GOOFS and

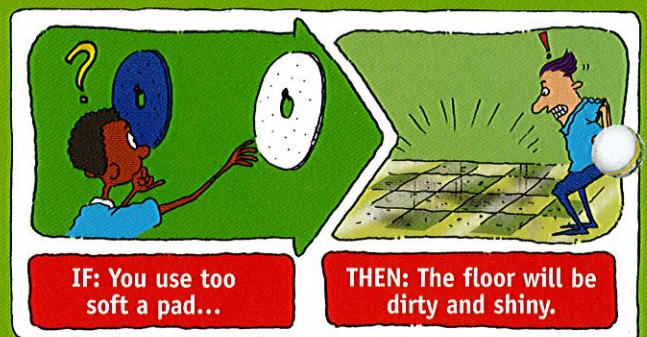





## ROTARY SCRUBBING:



Flood mop. Let dwell 5-10 minutes.

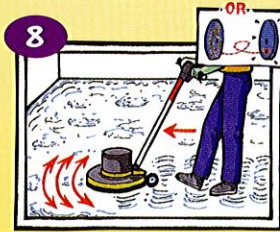

Scrub with a blue pad. Flip or change pad when clogged.

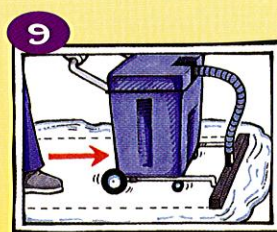


Wet vac pickup.




Damp mop rinse with clean water. Apply finish when the floor is dry.

OR


## AUTOSCRUBBING:

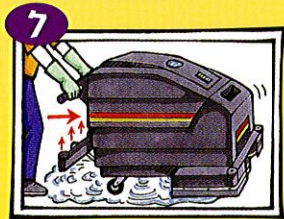

Use the double scrub method: autoscrub without vacuum on the first pass.

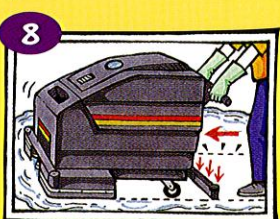

Autoscrub with vacuum on the second pass.

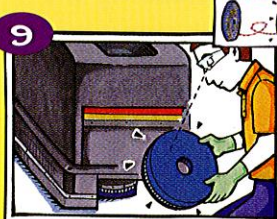

Flip or change pad when clogged.



Damp mop rinse with clean water. Apply finish when the floor is dry.

## CONSEQUENCES™

**IF:** You scrub too quickly...

**THEN:** The floor will have dirty, shiny patches.

**IF:** You don't rinse with clean water...

**THEN:** The finish will peel up from the floor.

# Professional Tips

## STRIPPING

- Start with clean, cool or warm water.
- On grouted floors, use a stripping brush.
- Don't cover too large an area.
- Move machine slowly and overlap the passes.
- Walk where you've scrubbed.
- Flip pads to avoid clogging.
- Never put stripper in the solution tank of an autoscrubber, this can damage the machine.
- Change rinse water frequently.
- Store wet pads in a plastic bag.
- When finished, clean all equipment.
- Wipe equipment and power cords clean.
- Butcher's Speedball® makes cleaning the equipment easier.

## FINISHING

- Use a clean bucket and wringer.
- Use a rayon/cotton blend mop.
- Apply even, medium coats.
- Stay 12" off baseboards and edges to prevent buildup on the first coat and every other coat after that.
- Allow 10 minutes before using a fan.
- Don't pour unused finish back into container.

## DAILY MAINTENANCE

- Dry and wet clean daily for best results.
- When mopping change mop water when dirty.
- Clean up equipment after use.
- Remember to plug in the autoscrubber after use.
- When using a mop, frame your area so you don't splash water on the baseboards.

## SPRAY BUFFING

- Match the pad to the machine.
- Work small areas at a time.
- Flip or replace pads when needed.
- If it takes more than 3-4 passes to buff out, use less product.

## BURNISHING

- Always clean the floor first.
- Match the pad to the floor finish.
- Do not leave the machine in one place too long.

## SCRUB & RECOAT






- When using an autoscrubber, use the double scrub method.
- For small areas or incline areas, use Butcher's Burn Out™ to make the job easier.
- When damp mop rinsing, use a clean mop.



# Maintenance Schedule



Fill in the chart below for the proper cleaning frequencies for your facility.

|  | S | M | T | W | T | F | S |
|--|---|---|---|---|---|---|---|
|  <b>SUNDANCE</b><br>Neutral Floor Cleaner <span style="float: right;">4 4</span>              |   |   |   |   |   |   |   |
|  <b>RAINDANCE</b><br>Low Foam Neutral Floor Cleaner <span style="float: right;">5 5</span>    |   |   |   |   |   |   |   |
|  <b>SPEEDTRACK</b><br>Clean-and-Burnish Restorer <span style="float: right;">24</span>       |   |   |   |   |   |   |   |
|  <b>SUNTRACK</b><br>Low Foam Neutral Floor Cleaner <span style="float: right;">48 48</span> |   |   |   |   |   |   |   |
|  <b>OVER DRIVE</b><br>Spray Buff  |   |   |   |   |   |   |   |
|  |   |   |   |   |   |   |   |
|  |   |   |   |   |   |   |   |
|  |   |   |   |   |   |   |   |

